 
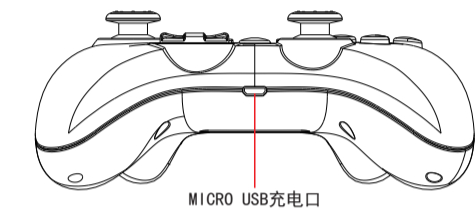 


莱仕达灵动3无线游戏手柄  
快速入门指南


### ●产品外观

感谢您选择莱仕达产品，感谢您对莱仕达品牌的支持，在使用之前请仔细阅读本手册。

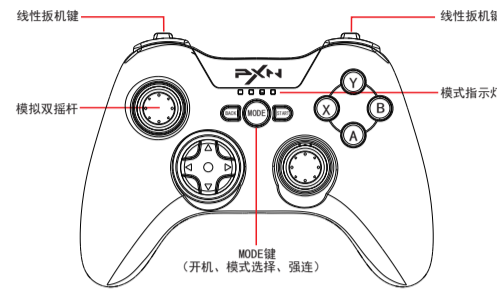

1

### ●产品配件

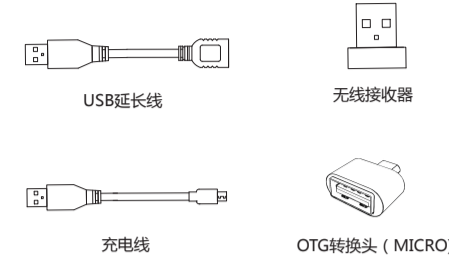

### ●功能特征

- 2.4GHz无线，Nano接收器。
- 安卓标准游戏手柄键值，支持安卓4.0及以上版本。
- 支持PC电脑、PS3主机、智能电视/机顶盒/平板。
- PC电脑支持PC/X360双模式，满足不同游戏所需。
- 手柄握把内置双振动马达。
- XBOX360经典手柄架构，人体工程学设计。
- 内置高效能锂电池和智能省电技术。

### ●支持平台

- 安卓平台：安卓4.0及以上版本的智能电视、机顶盒、及支持OTG功能的平板、手机等。
- PC电脑：Windows XP/7/8/10。
- PS3主机：即插即用。

2

### ●开/关机

- 开机：将接收器插入设备USB接口，按手柄“MODE”键开机，四个LED灯慢闪，几秒后手柄与接收器连接成功LED灯长亮。
- 配对：若手柄持续回连30秒连接不上，则手柄自动关机。请将手柄和接收器进行配对。在关机状态下按下“MODE”键保持3秒不放，四个LED由慢闪转为快闪后松开，手柄进入强制连状态，连接成功后手柄LED灯长亮。
- 关机：同时按住“MODE+START”键保持3秒不放，LED灯灭。

### ●模式选择


工作模式	LED状态及适用平台
安卓模式	1号灯亮，安卓智能设备
PCX360模式	2号灯亮，PC电脑X360类游戏
PC模拟模式	3号灯亮，PC电脑根据游戏选择
PC数字模式	4号灯亮，PC电脑根据游戏选择
PS3平台	根据主机分配通连，对应的灯亮

3




### ●安卓手机使用

- 将接收器插入安卓设备的USB接口，按手柄MODE键3-5秒开机，手柄LED1长亮即可正常使用。
- 在智能电视使用时，为保证手柄无线信号传输的稳定，请用配送的USB延长线按下图连接。

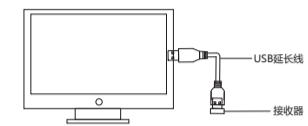


- 如你的安卓手机、平板支持OTG功能，用配送的OTG转接头按下图连接也能支持使用。

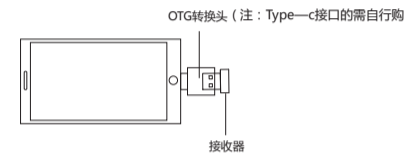

4

### ●PC电脑使用

- 请先打开莱仕达官网(www.e-pxn.com.cn)下载驱动并安装，具体路径为：莱仕达官网---服务---下载中心---手柄类。
- 下载“莱仕达灵动3 PXN-9603”驱动，然后按说明进行解压安装。
- PC模式选择：
  - X360模式：手柄连接电脑，默认为X360模式，LED2亮。此模式适用于PC电脑XBOX360类移植游戏(Games for windows)，如《刺客信条》、《实况足球》系列、《NBA 2K》系列等。
  - PC模式：X360模式下按下“MODE”键3秒进入PC模拟模式，LED3亮。此模式适用于早期的PC游戏，如《拳皇》、《极品飞车6-10》、模拟器游戏等。
  - 在PC模式下按MODE键进行不同模式切换。

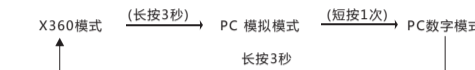

- 手柄检测：
  - 在PC电脑使用可打开电脑游戏控制器，进行功能自检，具体方式如下：
  - XP系统：打开控制面板--游戏控制器，点击属性测试。
  - WIN7以上系统，打开控制面板--设备和打印机--右键游戏手柄图标--游戏控制器设置，点击属性测试。

5

### ●充电功能

- 充电电源：标准USB 5V电压，可使用手机充电器、电脑、电视等USB接口为手柄充电。手柄充满电时间为3-4个小时。
- 充电指示：手柄在关机状态下充电，四个LED同时闪，充满后四个LED灭；手柄与接收器连接工作状态下充电，当前LED闪烁，充满后长亮。
- 低电提示：当手柄电池电压低于3.2V(±0.3)时，则当前指示灯闪烁提示，请及时充电。

### ●复位功能

当手柄出现功能错乱、死机或者其他异常时，请用回形针去按一下手柄背部复位孔(Reset)内的开关，对手柄复位关机，再按MODE键重新开机连线。

### ●注意事项

- 避免强烈震动、不可自行拆解、改装及修理。
- 避免水或其它液体进入手柄内部以免造成损坏。
- 避免存放于潮湿、高温、油烟等场所。
- 内有电池，请勿将手柄掉进火中，有爆炸危险。
- 儿童需在成年人的监护下使用本产品。

6

### ●产品规格

产品名称	莱仕达灵动3
产品型号	PXN-9603
连接方式	2.4G无线
工作电源	内置550mAh锂电池
工作电流	常态下小于20mA,振动状态小于100mA
包装尺寸	13.5*7.0*18.0CM
本体重量	约210克
使用温度	10-40℃
使用湿度	20-80%



7



2.4GHz Wireless Controller  
User Manual


### ●Product Overview

Thank you for choosing PXN' s product and supporting our brand. Please read the manual carefully before using.

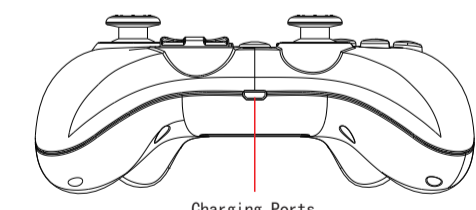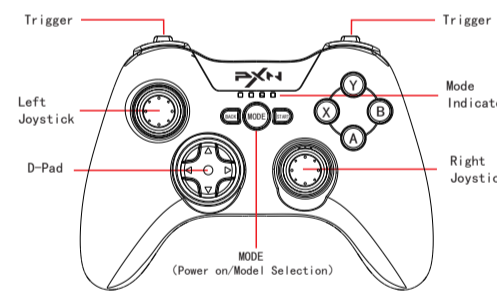

1

### ●Accessories

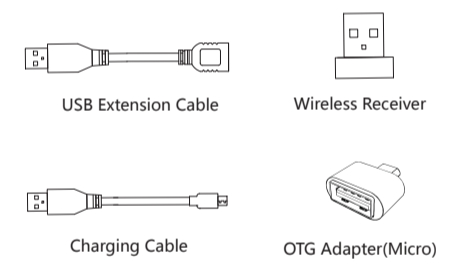

### ●Functional features

- 2.4GHz wireless, with Nano USB Receiver.
- Android standard gamepad buttons, supporting Android 4.0 and above versions.
- Support PC, PS3, Android and smart TV/STB/tablet.
- PC supports X-input/D-input. Dual mode to satisfy different Game requirements.
- Built-in dual vibrating motor will enable much more real game experience.
- xbox360 Classic gamepad structure is in conformity with Ergonomic design.
- Internal high-effect lithium battery and intelligent power saving technology.

2

### ●Support Platform

- Android Platform: smart TV and STB with Android 4.0 and above version as well as tablet and mobile phone with OTG function.
- PC: Windows XP/7/8/10.
- PS3: Plug and Play.

### ●Power ON/OFF

- Power ON: Plug the receiver into your device' s USB port; press MODE to power on; four LED indicators will slowly flicker; after several seconds, When LED1 indicator light keeps on, the gamepad is connected successfully.
- If connection cannot be realized within 30s, the gamepad will be automatically OFF. Please match the gamepad with the receiver : With gamepad off, press MODE for 3s till four LED indicators flicker quickly, and then the gamepad will enter forced connection status. The gamepad LED1 on is successful connection.
- Power Off: Press "MODE" and "START" in same time for 3 seconds,LED indicator light OFF.


3

### ●Working Mode

Working Mode	Status of indicator light
Android Mode	LED1 ON
PC X-input	LED2 ON
PC Analog Mode	LED3 ON
PC Digital Mode	LED4 ON
PS3	Any indicator light


### ●Android Device Connection

- Plug the receiver into USB Port of the Android device; Press 3 seconds MODE to turn it on; the gamepad' s LED1 indicator light on.
- Using smart TV, please connect with USB extension cable for the signal stability.

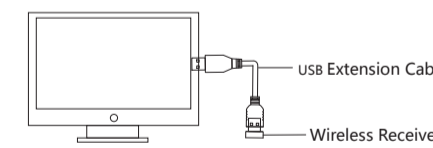

4

- If the Android mobile phone or tablet supports OTG function, please use OTG adapter to connect your mobile phone as follow.

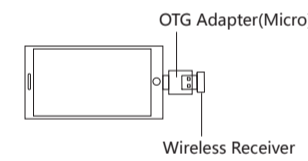

### ●PC Connection

- Open PXN official website ( www.e-pxn.com ) to download drive and install. The specific path is: PXN official website---- Support--- Drive ---PXN-9603
- Please download PXN-9603 Drive and then enable unzipping and installation as instructed
- PC Mode Selection:
  - X-input Mode: Plug and Play.
  - D-Input Mode: under X-input mode, keep pressing MODE for 3s to enter D-input mode with LED3 ON.
  - 3.3 MODE Change
    - X-input Analog (press 1s) -> D-input Analog (press 3s)
    - D-input Analog (press 1s) -> D-input Digital (press 1s)
    - D-input Digital (press 1s) -> D-input Analog (press 3s)

5

- Gamepad Inspection

It can go through function self-inspection by unfolding computer game controller under PC computer use. The specific methods are as below: XP system, unfold control panel--- game controller, click attribute testing. WIN7 system above, unfold control panel---device and printer---right-hand button click gamepad icon---game controller set, click attribute testing.

### ●Charging Function

- Charging Power: standard USB 5V voltage, charging current less than 300MA, it takes 3-4 hours before full charged.
- Charging Indicator: Charging under without working state, four LED light flash at the same time, the LED lights died out when full charged. Charging under working state, the indicating LED light of present mode blinks, it will keep on when full charged.
- Low batter warning: When the gamepad battery is less than 3.2V(±0.3), the present indicating light blinks prompt, please re-charge timely.

6

### ●Reset Function

When the gamepad occurs to functional disorder, dead halt or other abnormalities, it can be reset power-off by pressing the switch in the reset slot on the back of the gamepad and press the MODE key to restart connecting.

### ●Attentions

- Avoid fierce vibration. Don' t take apart, revise and mend by yourself.
- Don' t let water or other liquid entering inside of the gamepad to make any damages.
- Don' t store in places of high humidity, temperature, heavy oil or smoke.
- Don' t drop the gamepad into fire or explosion danger may be caused by built-in battery.
- Children should be under the custody of adults to use this product.

7

### ●Product Specifications

Model	PXN-9603
Connection	2.4Ghz wireless connection
Power source	Built-in 550mAh lithium battery
Working current	Normal state less than 20mA; vibrating state less than 100mA.
Packing size	13.5*7.0*18.0CM
Dimensions	15.3*11.1*6.1CM
Product weight	About 210g
Working temperature	10-40℃
Working humidity	20-80%

8