说明书尺寸： 80x120mm
材质：105g铜版纸
装订方式：骑马钉
印刷：单黑

PXN 莱仕达® 更懂玩家 天弓蓝牙版

莱仕达天弓蓝牙版游戏手柄
快速入门指南

iOS游戏厅激活码

感谢您选择莱仕达产品，感谢您对莱仕达品牌的支持，在使用之前请仔细阅读本手册。

●产品外观

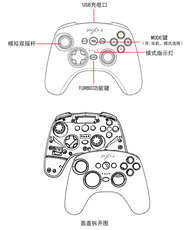

●功能特征

1、蓝牙连接技术，稳定无延迟，支持7米使用距离。
2、一机多用，支持安卓智能设备、PC电脑、iOS设备。
3、即插即玩PC电脑X360免游戏（Game for windows）。
4、内置双振动马达，支持PC电脑游戏振动功能。
5、内置高效能锂电池，智能省电技术，提供更长的游戏时间。
6、个性化可更换面盖。

●系统要求

* 支持平台：安卓智能手机、电视、机顶盒、平板等，PC电脑；iPhone，iPad。
* 支持系统：安卓4.0及以上，Microsoft Windows XP/VISTA/7/8/10；iOS7.1以上。

扫一扫，查看产品使用教程

●蓝牙连接

1、安卓设备使用
* 按住手柄键，再按MODE键开机，手柄LED1闪烁。
* 打开安卓设备蓝牙搜索，点击“PXN-9618”配对。手柄LED1常亮，表示连接成功。

2、新游安卓SPP模式
* 扫描下方“新游游戏厅”的二维码，安装新游游戏厅APP。

* 打开新游游戏厅，根据游戏类型，手柄将自动切换安卓标准模式和新游SPP模式，LED2常亮时手柄为SPP模式。如需自定义按键设置，可在游戏中同时按下“START+L1”调出设置界面。

3、iOS设备使用
* 按住手柄V键，再按MODE键开机，手柄LED3闪烁。
* 打开设备蓝牙搜索，点击“PXN-9618”进行配对。手柄LED3常亮，表示连接成功。
* 在iOS设备使用需安装专属游戏大厅，扫描下方二维码查看详细教程。

●PC有线连接

* 用USB数据线连接手柄与PC电脑的USB接口，电脑将提示发现新硬件并完成安装。
* 手柄LED1、LED2指示灯常亮，表示连接成功。

●PC电脑驱动安装与检测

1、在Win 7以上系统免驱动即插即用；XP系统请打开莱仕达官网（www.e-pxn.com.cn）下载驱动。
2、具体路径为：莱仕达官网---服务---下载中心---手柄驱动。下载“莱仕达天弓系列”驱动，按说明进行解压安装。
3、手柄检测：在PC电脑使用可打开电脑游戏控制器，进行功能自检；具体方式如下：
* XP系统：打开控制面板--游戏控制器，点击属性测试。
* WIN7以上系统：打开控制面板--设备和打印机--右键游戏手柄图标--游戏控制器设置，点击属性测试。

●TURBO功能（不支持iOS设备）

1、可设定TURBO功能的按键有A、B、X、Y、L1、R1、LT、RT、L3、R3。
2、TURBO设定：同时按下“TURBO+功能键”，则该键具有TURBO功能；TURBO执行时LED4闪亮。
3、TURBO清除：同时再按下“TURBO+已设定功能键”则取消该键具有的TURBO功能。

●开机/关机

1、开机：短按“MODE”键1秒，即可启动手柄。
2、关机：长按“MODE”键3秒，即可关闭手柄。
3、同一台设备首次使用需按组合键开机对手柄进行配对，再次使用时按手柄MODE键开机，手柄自动回连。

●充电功能

1、充电电源：标准USB 5V电压，可使用手机充电器、电脑、电视等USB接口为手柄充电。手柄充满电时间约为2-3个小时。
2、充电指示：手柄在充电中，LED4闪烁，充满后LED4常亮。
3、当手柄电量不足时，LED4熄闪，需及时给手柄充电。

●睡眠功能

1、手柄在配对状态下，1分钟无连接进入睡眠状态。
2、手柄在回连状态下，30秒无连接进入睡眠状态。
3、手柄在工作状态下，5分钟无任何按键、轴动作进入睡眠。
4、睡眠状态下，按“MODE”键唤醒，自动回连关机前的模式。

●复位功能

当手柄出现功能错乱、死机或者其它异常时，可以通过按手柄背部复位孔内的开关，对手柄复位关机，再按MODE键重新开机连线。

●手柄支架结构示意图

●安装说明

1. 轻拧支架调节螺栓，将支架展开。

2. 将手柄卡槽尾端扣到手柄上，向上推到位。
（压板要向上翻起，以防挂住）



●组合手机支架功能

打开支撑杆，当手机卡在支架上，放到桌面上时，不会向前倾翻，可作手机支架使用。

●取下支架

用手指扣住锁扣向外拉，当锁扣完全松开后，即可取下支架

●独立手机支架功能

1. 按下图方式调节，支架还可以单独作为手机支架使用。

2. 单独手机支架使用效果。

●注意事项

1、避免强烈振动、不可自行分拆、改装及修理。
2、避免水或其它液体进入手柄内部以免造成损坏。
3、避免存放于潮湿、高温、油烟等场所。
4、内有电池，请勿将手柄掷进火中，有爆炸危险。
5、儿童需在成年人的监护下使用本产品。

●产品规格

产品名称	莱仕达天弓蓝牙版
产品型号	PXN-9618
连接方式	蓝牙/有线连接
工作电源	内置550mAH锂电，支持约20小时使用
工作电流	25mA-100mA
包装尺寸	18.5*17.2*7.5CM
本体尺寸	15.3*12.5*5.5CM
本体重量	约285克（手柄+支架）
使用温度	10-40℃
使用湿度	20--80%

PXN PXN-9618

Wireless Gamepad
Quick Start Guide

Thank you for choosing PXN’s product and supporting our brand. Please read the manual carefully before playing.

●Product Overview

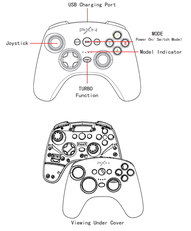

●Function Features

1. Connected by Bluetooth，applicable to a distance of 7 meters.
2. Compatible with Android Devices/ PC.
3. Support X-Input, Plug and play X-Input game (Games for Windows).
4. Built-in dual vibration motors in the gamepad, support PC game vibration function.
5. Built-in high efficient lithium battery and smart power saving technology. Playing longer.
6. Personalized cover could be replaced.

●System Requirements

* Supported Platforms：Android Mobile phone/TV/ STB(Set Top Box)/Tablet and PC.
* Supported Systems：Android 4.0 and later versions, Microsoft Windows XP/VISTA/7/8/10.

SCAN TO CHECK USER MANUAL

●Bluetooth Connection
(Android Devices Only)

1. Open the Bluetooth on Android device, turn on the search function.
2. Press button A firstly, then press MODE to start the gamepad. The LED1 indicator light flashes.
3. Connect with “PXN-9618” on the Bluetooth management interface of the Android device.
4. When LED1 indicator light is always bright, means the gamepad is connected successfully.

●PC Wired Connection

Using USB cable connect to the Gamepad’s Charging Port to the PC’s USB interface, the computer will be prompted to discover the new hardware and complete the installation.

* The gamepad LED1, LED2 LED is always bright, indicating the connection success.
* PC computer using, recommend to download and install gamepad driver.

1. Download driver at www.e-pxn.com, Guiding: PXN web---Service---Download--- Gamepad drivers.
2. Download “PXN-9608/9618” Driver, install according to introduction.
3. Gamepad Inspection：

* Gamepad inspection is available when open game controller on computer. The specific methods are as below:
* XP system, unfold control panel--- game controller, click attribute testing.
* WIN7 system above, unfold control panel---device and printer---right-hand button click gamepad icon---game controller set, click attribute testing.

●TURBO Function

1. Available Buttons: A、B、X、Y、LT、RT、L1、R1、L3、R3.
2. TURBO Set：Press TURBO and Available Buttons, indicator light LED4 flash.
3. TURBO Clear：Press TURBO and Well-Setting Buttons.

●POWER OFF/ON

1. Power On：Press MODE button 1 second to start.
2. Power Off：Long press MODE button 3 seconds to power off.

* Under Bluetooth，only need to connection at first time,

press MODE to power on thegamepad will be connected automatically same mode at second time.

●Charging Function

1. Power supply：Standard USB 5V, could use mobile charger, computer, TV, etc USB interfaces to charge, full charged time is 2-3hours.
2. Charging indication：LED4 flash in charging, the LED4 light will be always bright when the gamepad is full charged.
3. When the gamepad is lack of power, LED4 will flash slowly, please charge in time.

●Sleeping Function

1. Paring MODE: The gamepad enters sleep state after 1 minute disconnection.
2. Automatically Connecting MODE: The gamepad enters sleep state after 1 minute disconnection.
3. Working MODE: The gamepad enters sleep state after 5 minute no action.
4. Under sleeping state, press MODE button will come back to the mode of last time.

●Reset Function

When the gamepad crashed or other abnormalities, you can reset the gamepd by pressing the switch in the reset slot on the back of gamepad, and then press the MODE button to reboot the connection.

●Gamepad Clip Overview

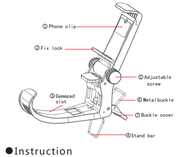

●Instruction

1.Loosen the adjusting screw to open the clip.

2. Rise the fix lock then buckle the hook end of Gamepad slot to the Gamepad, pushing up into position.

●Combined Cell Phone Stand

As opened stand bar, it can be used as phone stand and wouldn’t fall down ahead when the phone is fastened on the clip on the table.

●Remove the Gamepad Clip

Pull the buckle cover to loosen the fix lock and remove the gamepad clip.

●Independent Cell Phone Stand

1. Adjust as below picture, the clip can also be used as a phone stand.

2. Front view of use the clip as phone stand.

●Attentions

1. Avoid fierce vibration. Don’t take apart, revise and mend by yourself.
2. Don’t let water or other liquid entering inside of the gamepad to make any damages.
3. Don’t store in places of high humidity, temperature, heavy oil or smoke.
4. Don’t drop the gamepad into fire or explosion danger may be caused by built-in battery.
5. Children should be under the custody of adults to use this product.

●Product Specifications

Product Mode	PXN-9618
Connection Pattern	Bluetooth/wired connection
Working Power	Built-in 550mAh lithium battery support 20hours using
Working Current	25Ma-100mA
Packing Dimension	18.5*17.2*7.5CM
Dimension	15.3*12.5*5.5CM
Weight	Appr.285g(Gamepad + Clip)
Application Temperature	10-40℃
Application Humidity	20--80%